

SUMMIT



ALUMINIUM RAISED RAILING BARS



SUM-002/003

IMPORTANT!

READ FULLY BEFORE FITMENT AND KEEP
INSTRUCTIONS FOR FUTURE REFERENCE




**We do not recommend the use of roof top tents
or awnings with these roof bars**

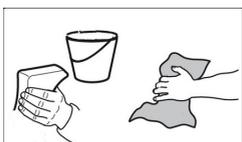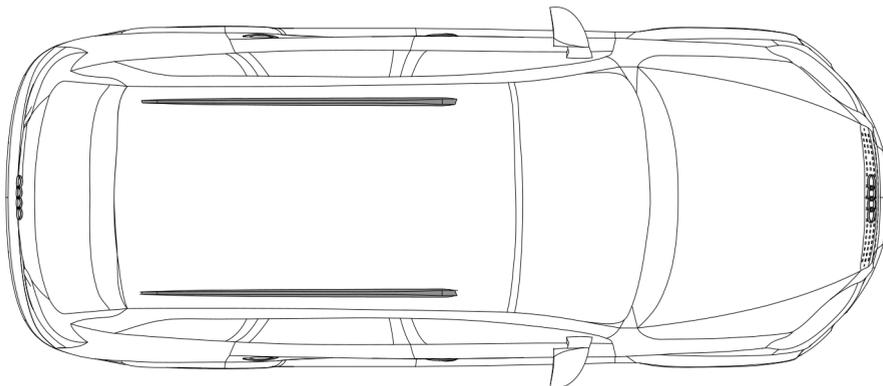


Pre Installation checks

1. Clean the running rails & your vehicle before installation.
2. Check that the rubber strip on the top of the roof bar is fully inserted.

1

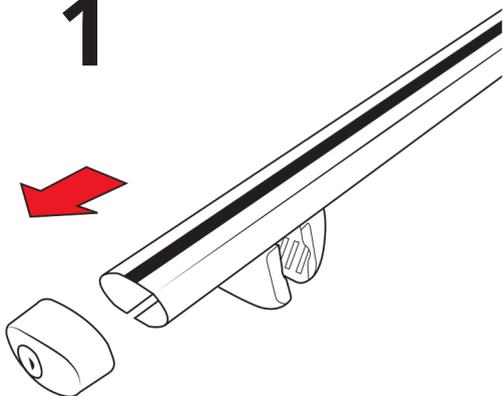


Unlock and carefully remove all four end caps from the roof bars.

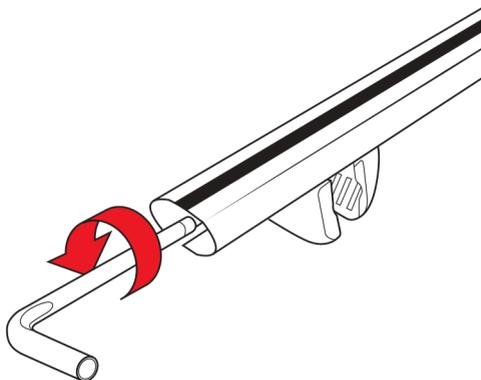

Using the Allen key provided, fully open the clamp mechanism inside the roof bars, this mechanism tightens the foot clamp onto the bar & also onto the roof bars themselves.

2a


Vehicles without fix point

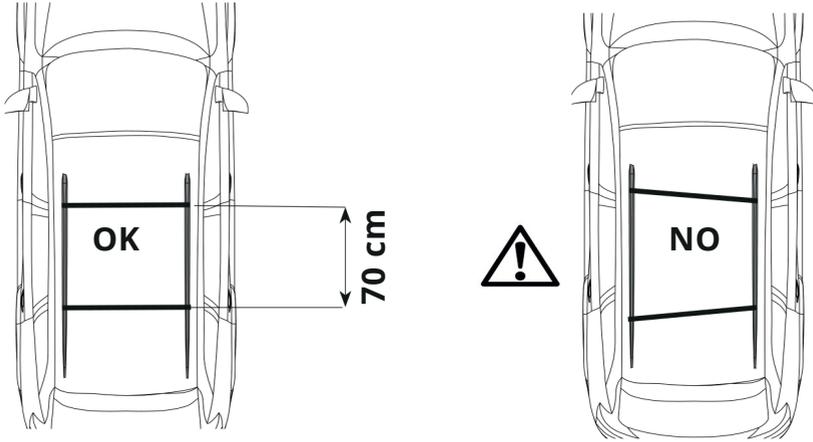

Ensure bars are a minimum of 70cm apart


2b

Vehicles with fix point

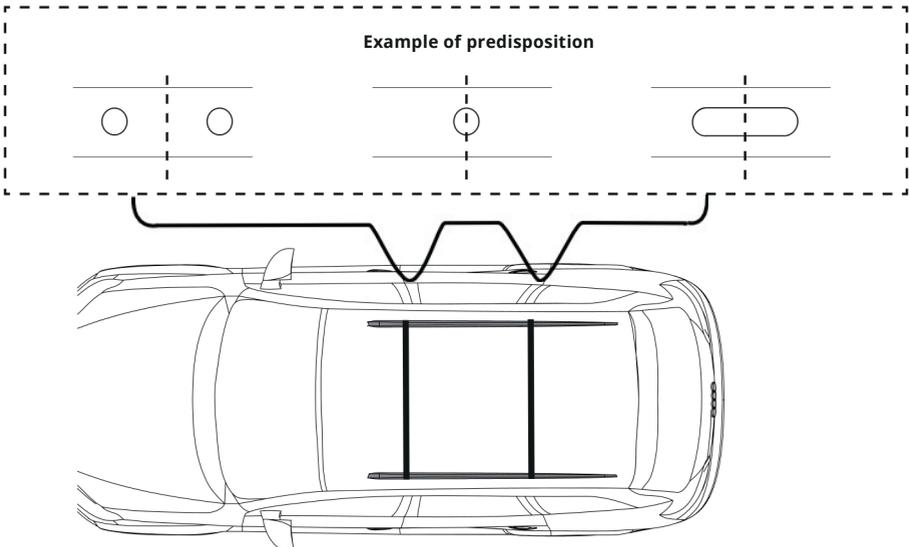

If the vehicle is equipped with original fix points, place the bars in the middle of them

3

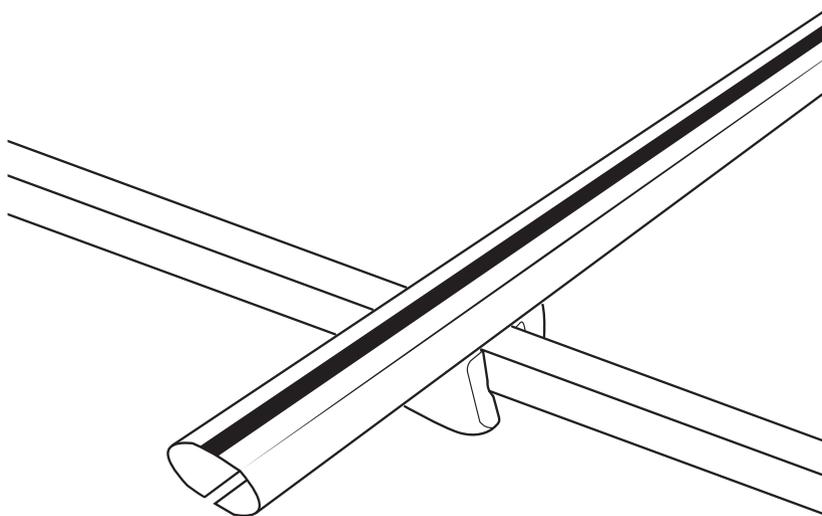


Place the roof bars onto the vehicles original rails, ensuring the positional guidance in step 2 is followed.

Centralise the roof bars on the vehicle and, if needed, slide the foot clamps along the bars to ensure they are positioned correctly and that there is an equal length of bar on each side of the feet.


Do not line the bottom of the roof bar clamp up with the bottom of your running rail, the foot must be as far down on the rail as possible.

4

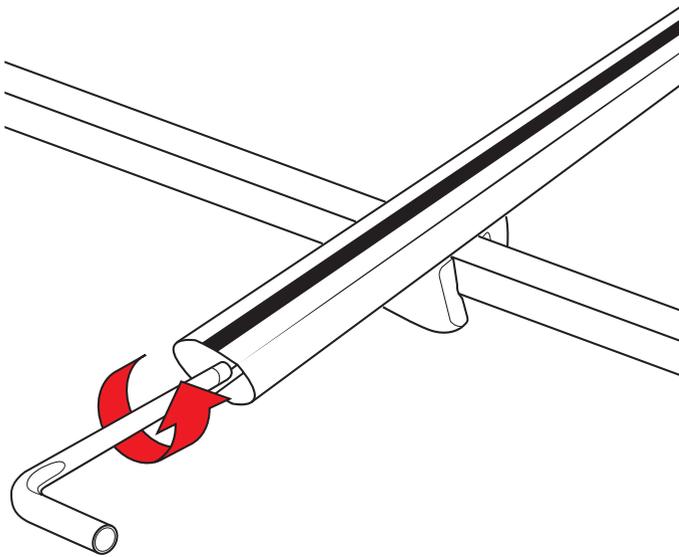


Using the Allen key, tighten the foot clamps **alternately** onto each side of the roof bar.

5

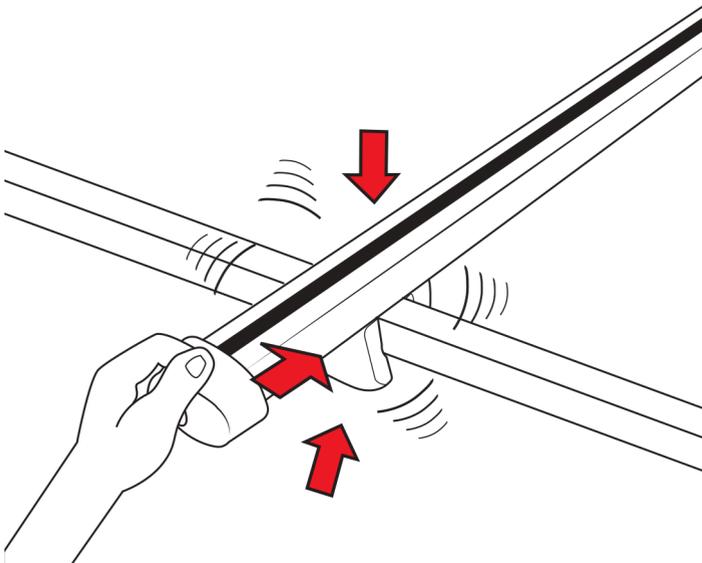


Once you have tightened each foot, replace the end caps and lock them into place.

6

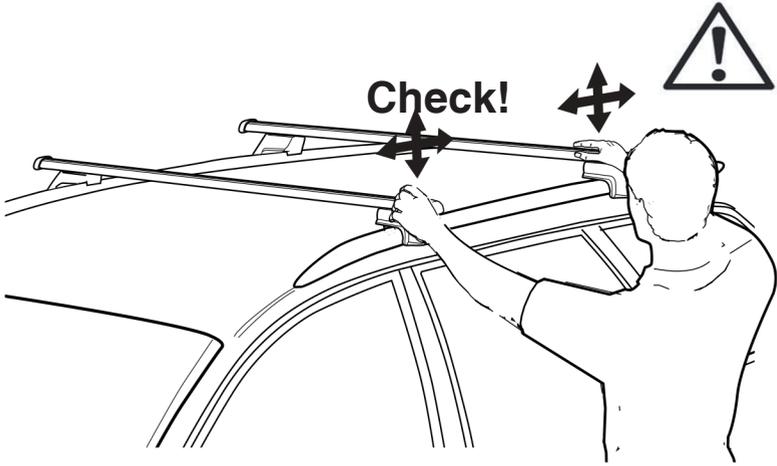

7

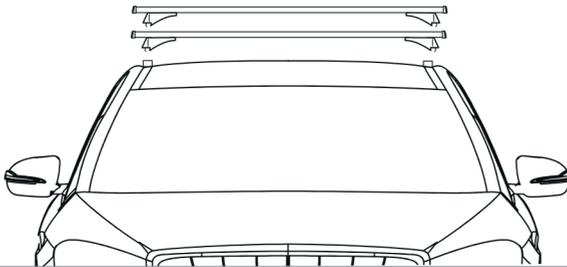

Installation Notes:

- Fit the roof bars according to these instructions only. Do not assemble or use this product unless you have understood the fitting instructions. Check that all the necessary parts are included. • Check and make sure that all fastening parts are fixed securely. Please check also that the load is fastened properly by pushing and pulling it. Recheck regularly as recommended in these instructions.

Important Safety Notes:

- Please retain these instructions future reference.
- The maximum dynamic load evenly distributed over the full width of the bar with a low centre of gravity is 75kg (including the weight of the bars; approx. 4kg). Check the vehicle handbook for the maximum permitted load. If the vehicle hand book states a maximum of less than 75kg, then that is the maximum permissible load. If the vehicle handbook states a maximum heavier than 75kg, the maximum dynamic load for these roof bars is still 75kg - and this must not be exceeded.
- It is your responsibility to ensure that all loads are correctly and safely secured using suitable fixing methods (e.g. strong webbing straps with buckles). Where specialised accessories are available, they should be used (e.g. Cycle Carriers, Ski Holders, etc). If small heavy loads are being carried, load to one side of the bar, not the middle. **Never attach any loads to any roof bars using bungee cords or elasticated straps.**
- Before driving and at regular intervals during your journey, check that all securing screws, clamping devices and foot attachments are fully tightened, in accordance with these instructions. Additionally ensure the load is fastened correctly. We recommend a short test drive immediately after fitting any loads, you must then check & if required retighten your roof bars & any load.
- After covering a short distance, all securing devices of both the load and the roof bars must be checked and tightened as required. This needs to be repeated at regular intervals as recommended in these instructions.
- To prevent damage or discolouration to the paint under the foot pack rubber, we recommend cleaning the roof bar feet and the vehicle roof prior to fitment. The roof bars should be removed when not in use.
- Neither the roof bars or the load should project beyond the maximum profile of the vehicle.
- Take care not to drive into low places such as garages or multi- storey carparks when carrying a high load, particularly cycles. Do not drive through an automatic car wash with the roof bars mounted on the vehicle. **When carrying long loads take care when opening the boot to not hit the boot lid onto the load.**

- Please note that some antennas can interfere with roof bars or loads when installed and should be removed, where possible.
- Sunroofs should not be used when roof bars are fitted.
- Follow the instructions thoroughly and do not jump ahead in the sequence (1,2,3, A,B,C... etc).
- **It is your responsibility to ensure that your roof bars & any loads are correctly & securely fitted to your vehicle.**

- Using the bars, especially when carrying a load, will affect the driving and braking characteristics of your car. Larger roof loads may also affect your car's sensitivity to cross winds. For safety reasons, the vehicle must not be driven at maximum speeds. Speed should be matched to the load being transported, to prevailing conditions including the state of the road, the quality of the road surface, the volume of traffic, etc., and of course any speed restrictions in force. We recommend a maximum speed of 65 mph, but the vehicle speed when transporting a load of any kind must be matched to the prevailing conditions.
 - Surfboards, boats and large flat objects may produce damaging aerodynamic forces to the vehicle. We therefore recommend travelling at much reduced speed when carrying these articles. **Where two or more surfboards are carried (or similar items which may produce lifting forces) they should not be carried side by side, but should be stacked one upon the other. All long, flat objects should be secured independently to the front and rear of the vehicle using straps which are capable of withstanding the lifting forces - do not use bungee cords or elasticated straps.**
 - **When carrying kayaks or canoes ensure that they are secured to the bars and also the front and rear of the vehicle in the upright position.**
 - If you are using these roof bars during the winter months, they must be kept clean and properly maintained, all dirt and salt must be removed. Bolts, screws and nuts should be lubricated at regular intervals, the periodic use of a spray lubricant will keep any lock barrels working freely.
 - Always fit the roof bars in accordance with these instructions. The spacing between the front and rear bars must never be less than 700 mm, except where the vehicle mountings determine the spacing. **IMPORTANT:** These roof bars are specifically designed for your car model. Please therefore check which roof bar is needed when changing your car.
- Do not use spare parts from other products.

The manufacturer takes no responsibility for damage caused by an incorrectly fitted roof bar.



Mountney Ltd
MXL Centre,
6 Lombard Way,
Banbury, OX16 4TJ, UK
www.mountneyltd.com
info@mountneyltd.com

EU Rep.
Authorised Rep Compliance
Ltd., Ground Floor, 71 Lower
Baggot Street, Dublin, D02
P593, Ireland.
www.arccompliance.com