
SUMMIT HEAVY DUTY STEERING WHEEL LOCK WITH TWIN BAR HOOK

Supplied with 2 keys

**Fitting Instructions**

1. Line up the cutout on the key head with the red dot on the barrel, push the key into the barrel of the lock.
2. Rotate the key through 90°.
3. Slide the adjustable arm in.
4. Place and adjust the twin hooks inside the steering wheel rim.
5. Once the steering wheel lock has been adjusted into your steering wheel, turn the key and remove from the lock.
6. To remove the steering wheel lock, insert the key by following step 1, turn the key and pull the hooks together to release from the steering wheel.

N.B. Spare or replacement keys are **not** available.

Safety Notes

This lock will not prevent the starting or moving of the vehicle.
Do not start or drive the vehicle with the lock attached.
Failure to remove the lock could result in injury or damage.

