
SUMMIT STEERING WHEEL LOCK T-BAR DESIGN

Supplied with 2 keys



Fitting Instructions

1. Put key into the barrel. CAUTION: the arm head is SPRING LOADED.
2. Rotate the key through 90°, the head will release.
3. Rotate the key back to the start position and remove.
4. Place the arm over the steering wheel, with the bar pointing towards the windscreen.
5. Push the arms together to close around the steering wheel.
6. To remove the steering wheel lock, repeat steps 1 to 3.

N.B. Spare or replacement keys are **not** available.

Safety Notes

Caution: the arm head is SPRING LOADED.
This lock will not prevent the starting or moving of the vehicle.
Do not start or drive the vehicle with the lock attached.
Failure to remove the lock could result in injury or damage.

