





SUM-707

HEADREST MOUNTED ADJUSTABLE DOG GUARD - FITTING INSTRUCTIONS

A. Mesh assembly
x 1

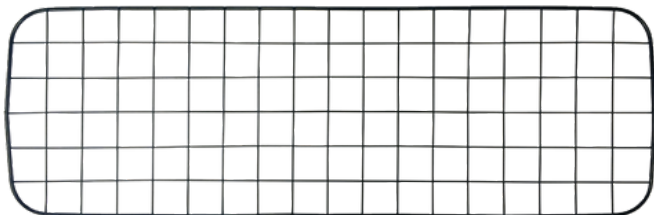

B. Mesh side panels
x 2

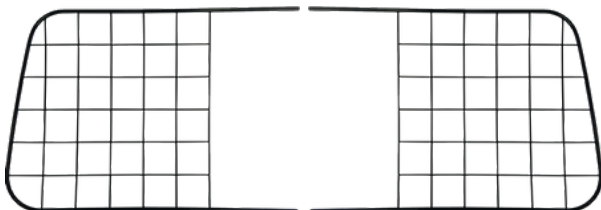

C. Fixing poles & mounting clips
x 2



D. Screws x 6
2 x 70mm
2 x 80mm
2 x 100mm



You will use only 2 screws*


E. Screw caps x 2
These are supplied
in 2 parts, which
connect together



F. Hooks
x 2




G. Mesh connector clips
x 8


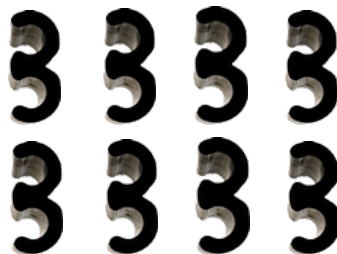


*Please note: If the 80mm screw is too long, use the 70mm. If the 70mm screw is too short, use the 100mm. You will have 4 screws left after you have fitted this dog guard.

1. Connect the fixing poles to the mesh assembly, the holes must be towards the bottom. The poles must line up to the head rest stalks.

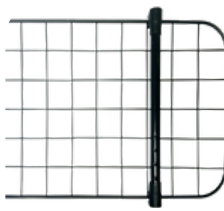

2. On the opposite side to the fixing poles, connect both mesh side panels to the mesh assembly using the mesh connector clips. The wider parts should be at the bottom.

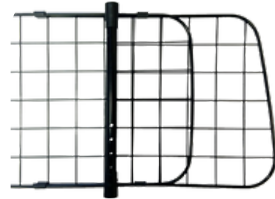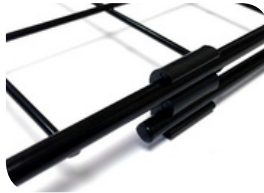

3. Insert 2 x screws into the screw caps - you will need to select the best size for your vehicle.*



4. Insert the screws with screw caps through the fixing pole holes & screw on the hooks to the reverse side.



5. Position the assembled dog guard at the desired height and fix the hooks in place around the headrest stalks.



6. You can now slide the side panels to fit your cars width. You may need to readjust the connector clips.



Mountney Ltd

MXL Centre, 6 Lombard Way, Banbury, OX16 4TJ
www.mountneyltd.com info@mountneyltd.com